


Pickwick Door sizes and Installation Instructions


Just follow the steps explained below. Ideally, if size of pet permits, door should be hung well above ground to allow for obstructions or snow.

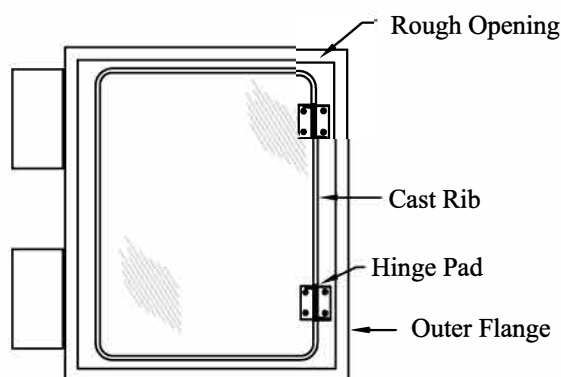

Inside or Rear View

Step One

Cut rough opening to clear Cast Rib and Hinge Pads as shown.

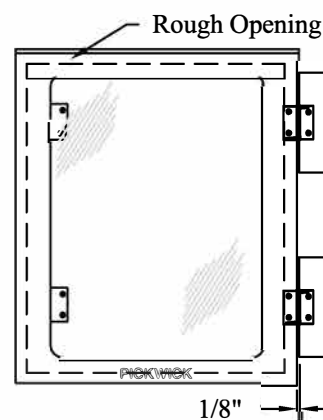


Outside or Front View

Step Two

Attach shims to door hinges. Allow 1/8" clearance as shown. Equalize door in rough opening. Drill through shims and attach to wall. (additional fasteners not included)

Drill through shims as required for mounting.

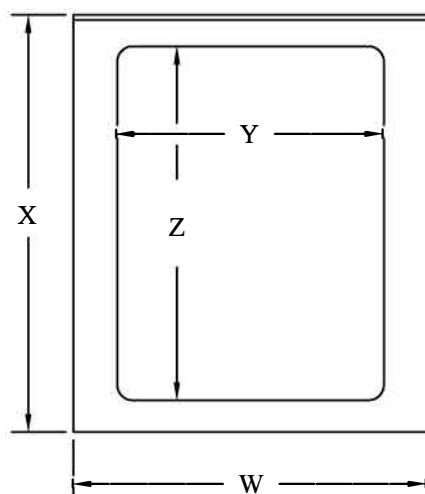

7 MODELS TO SUIT YOUR NEEDS

Model	Door Dimensions			
	Outside Door		Inside Door	
	W	X	Y	Z
Model B #7252	13 1/8"	19 1/2"	9 3/8"	16 5/8"
Model A #7287	16 3/4"	19 3/4"	12 5/8"	16 3/4"
Model D #7254	15 7/8"	21 3/4"	11 5/8"	18 3/4"
Model E #7288	15 1/4"	22 1/2"	11"	19 5/8"
Model F #7255	17"	23 1/2"	12 3/4"	20 3/4"
Model C #7253	17 1/2"	29"	13"	26 1/4"
Model G #5453	17 1/2"	39"	13"	36 1/4"

Rough Open Dimensions			
Width		Height	
Min.	Max.	Min.	Max.
11 1/8"	12 5/8"	17 1/2"	19"
14 1/2"	16 1/4"	17 3/4"	19 1/4"
13 1/2"	15 3/8"	19 3/4"	21 1/4"
12 3/4"	14 3/4"	20 5/8"	22"
14 1/2"	16 1/2"	21 3/4"	23"
14 3/4"	17"	27 1/8"	28 1/2"
14 3/4"	17"	37 1/8"	38 1/2"